


% • V . È @ & ² C |

G

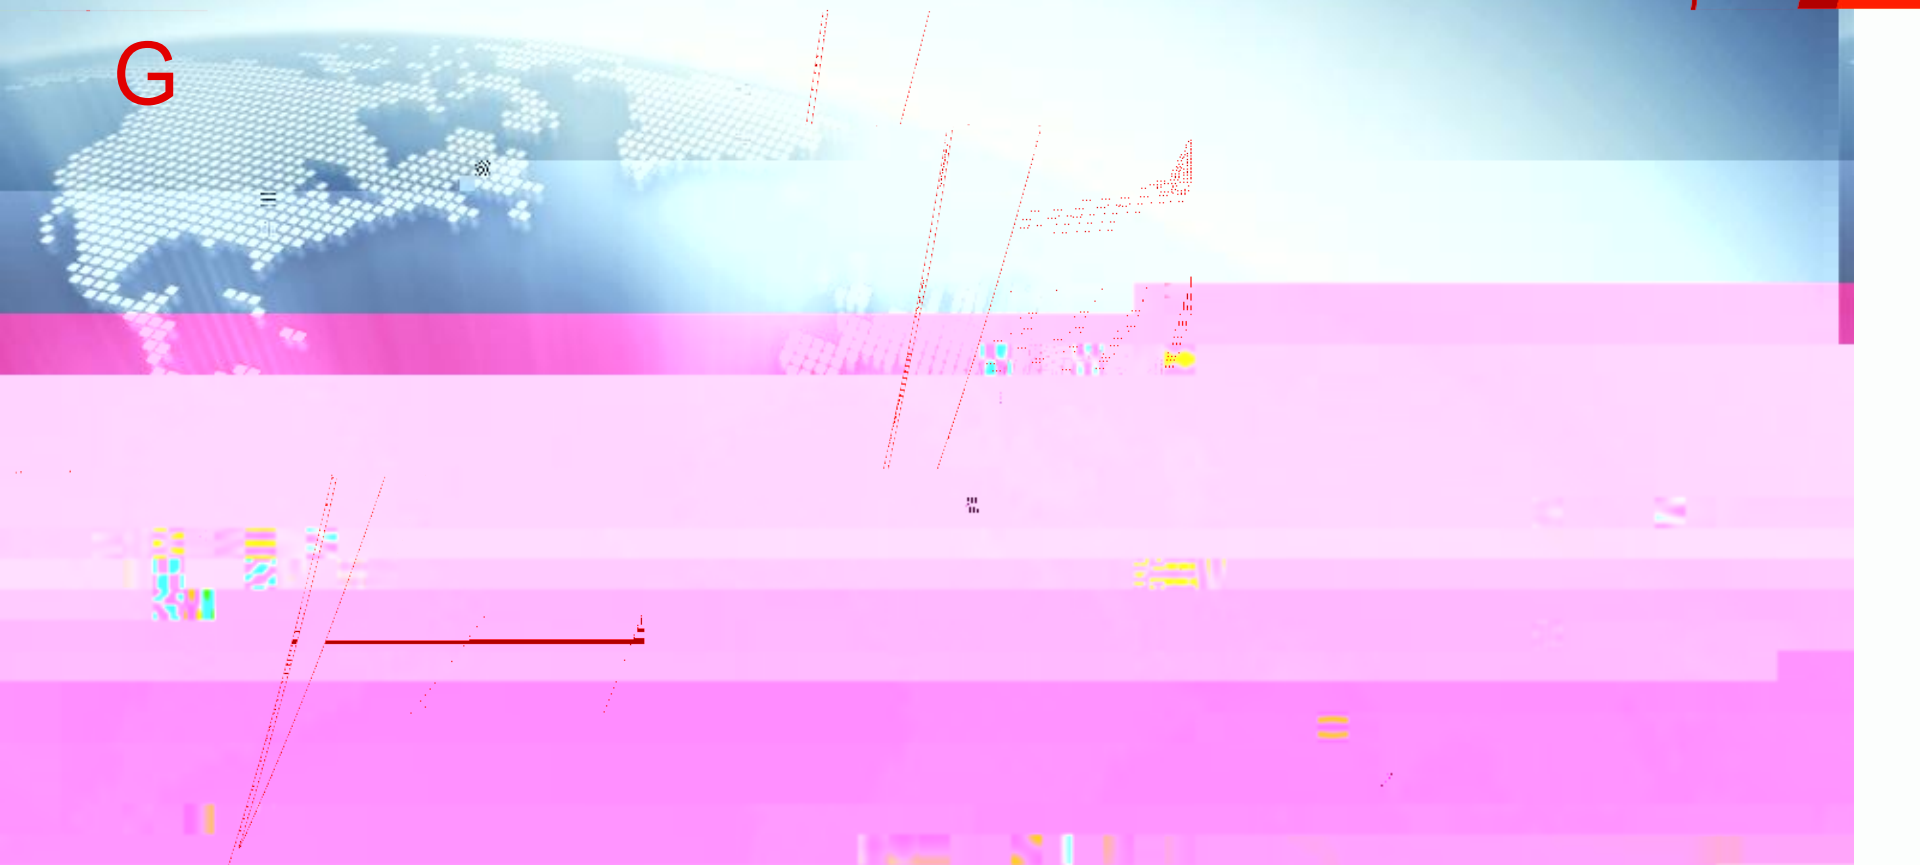

ù ¢ Contents



1

安装设备到指
定位置

I



ù Ú ì G ð x Ô19)² Ò c 1 d u

1


I



GfÔđV€U (; Ô²Ò »]éª‘ïÐd

4

S57H

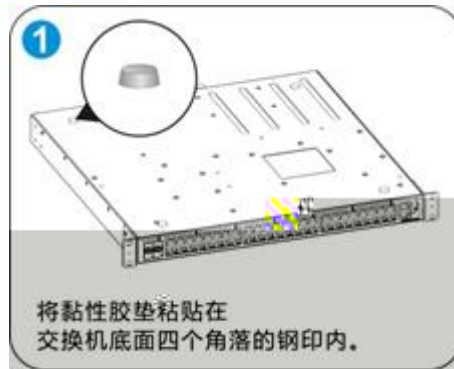

I



G°Ê 6‡/©-c1 du


OT

OT

G°Ê x/©-u


PE

PE

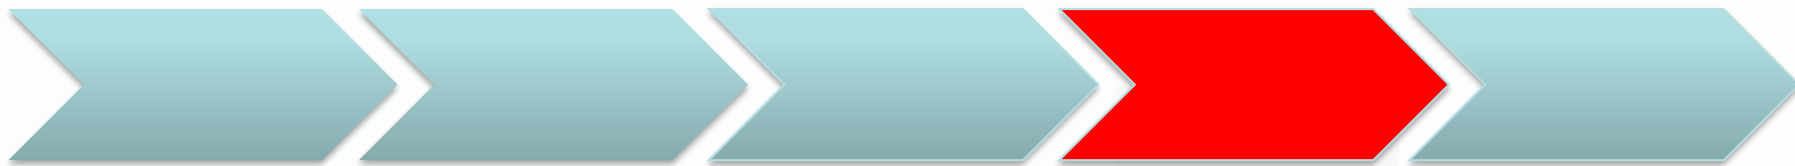

G Ô | ± u

6 u Ô | ± TCã 7 g \$ Ô | T • if Ô n V € ož

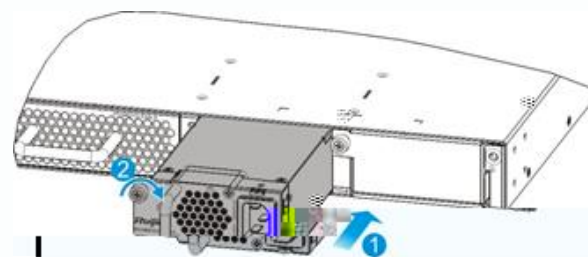


I




GPI ±u

Iu M5000H xæPI ±/L) - V jÔ7 g {• ²— Ô©4Æ

RG-S57H

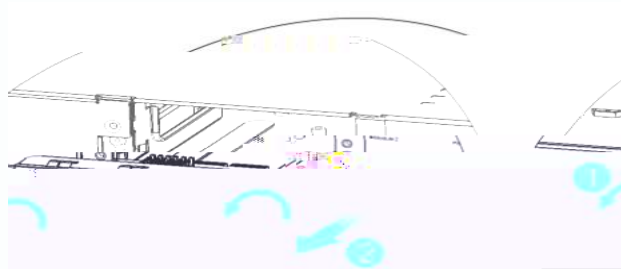

I

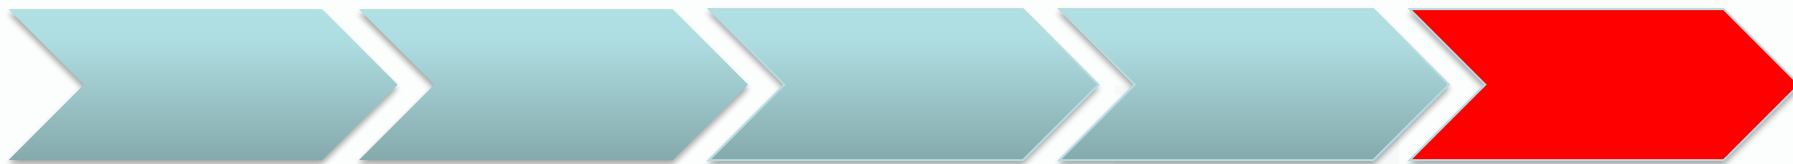

zòóó

20

žšä/óó

ô|óó

ù ¢ Contents



1

1 Console

2 Telnet/SSH



Ruijie


www.ruijie.com.cn

Console M' o — Õ k F å Ø ©%¾v8 / | U Ø k%¾~ z•S•tà'•RJ-45 V ã I

| Console



| Console

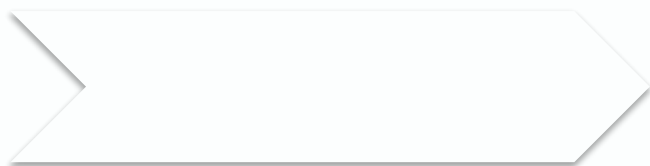

Console



Console

CLI

Telnet/SSH

CLI

aÂÙ„ O” u

ÐÐ “ ¥aÓ wW

æ´ “ u xžÓ gg]aÂ gfÔ n g•pW

´ “ u ^ . ? d ´

| Console




b CLI “ é ã &



Ruijie>enable

Console

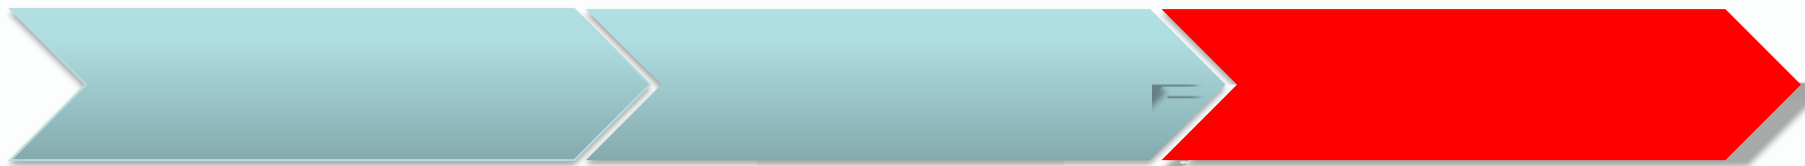

?

11.X CLI

10.X

CLI

```
Ruijie#show version /show version slots / show cpu /show memory /show interface status /show ip route /show arp /show fan / show power /show temperature....
```

```
Ruijie#show run //
```

```
Ruijie(config-if-GigabitEthernet 1/1)#show this //
```




Telnet



Telnet



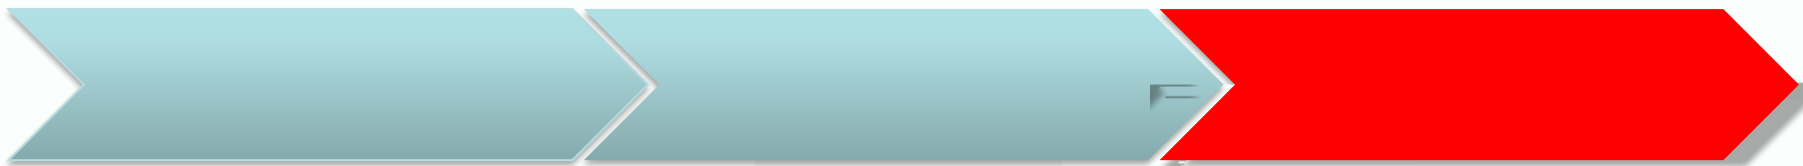

RG-S5700H
RG-S5700H

RGOS11.4(1)B42
RGOS11.4(1)B42

S12000

S8600

S5750

S6220


10.X

S57H

11.X

ù ç



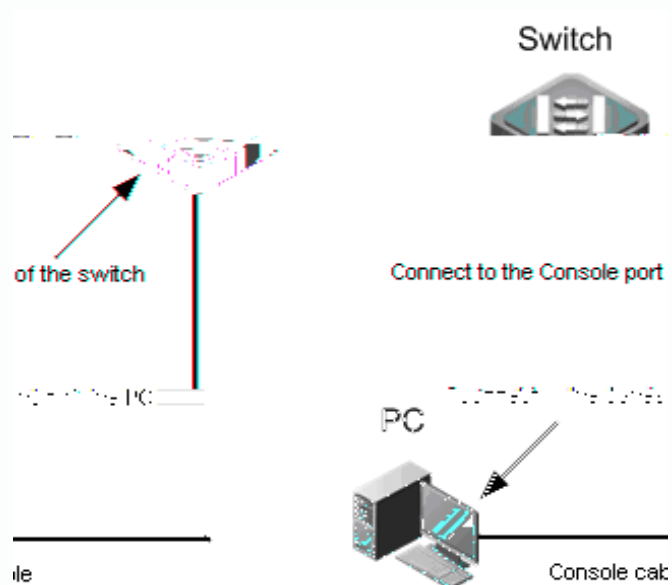

- 1 U
 - 2 FTP
 - 3 TFTP
 - 4 UBOOT
- FTP
- PPT

i • ° æ5Š Đ T ¿ (f u

1

2 bug

3

| U



006 • u

show version detail

system software number

4008)

U

U

USB

U

U


show usb

usb id, usb remove xx

U



I U

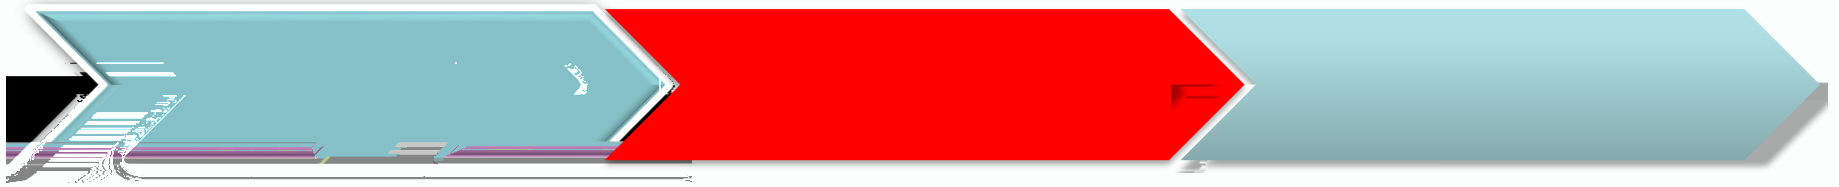

1o• § f Ô a Â Ù „ Ý 6 upgrade f W

Ruijie#dir usb0: USB

Ruijie#upgrade usb0:/xxxxx_install.bin xxxx_install.bin U

2o• W ↪ f á ... É 100% g Ě „Đ show upgrade status Ó f á ...

```

*Nov 27 19:29:03: %7: [slot 0]:Reload system to take effect!
*Nov 27 19:29:04: %7:
*Nov 27 19:29:04: %7: [slot 0]:Upgrade processing is 100%
*Nov 27 19:29:05: %7: [slot 0]
*Nov 27 19:29:05: %7: device_name: s6k
*Nov 27 19:29:05: %7: status: SUCCESS

Ruijie#
Ruijie#
Ruijie#show upgrade status
[slot 0]
dev_type: s6k
status : success
Ruijie#

```

3o• W ↪ f Ù , é log á ...100% g success • (Ã • ù n 2 â \$! •
 , - R € Ÿ p é Š FLASH g] g Ã Ü 6 é ß Š ¾ • - dg . T á 6
 reload n g nd, j p • ¼ Ü 6 3 ož



1o• W → f Ô n É

2o• Ý 6 show version detail '54 g Ó • - f — È

```

Ruijie#
Ruijie#show version detail
-----
Software version: 8.5.2015R08-14(1)B2_Release(02)
Hardware version: 1.1.5
-----

```

大版本

8.5.2015R08-14(1)B2_Release(02)

FTP



1 FTP Server USB0 S6010 FLASH

```
Ruijie(config)#ftp-server username admin
Ruijie(config)#ftp-server password ruijie
Ruijie(config)#ftp-server topdir usb0:/
Ruijie(config)#ftp-server timeout 300
Ruijie(config)#ftp-server enable
```

2 PC FTP Client FLASHFTP FTP PC
S57H

3 PC FTP FTP Server

4 Upgrade USB

5 — u
FTP


USB

USB
Upgrade

FTP

FTP
U

TFTP

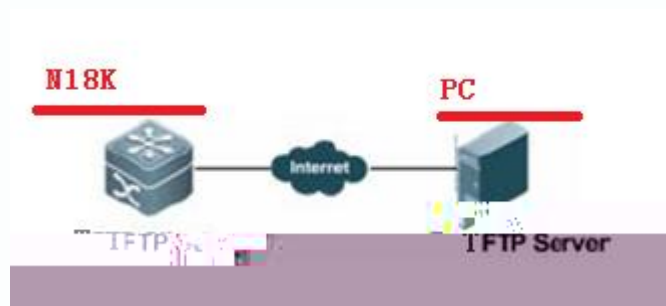

1	PC	TFTP Server		PC	S57H
2	S57H	TFTP Client	TFTP	,	USB
	tmp		tmp		
	Ruijie#copy tftp://192.168.1.1/S5700H_RGOS11.4(1)B2_02191904_install.bin				
	usb0:/S5700H_RGOS11.4(1)B2_02191904_install.bin				
3	Upgrade				USB

5 — u

TFTP

USB

TFTP

TFTP

USB

U

Upgrade

TFTP

TFTP

TCP

TFTP

UDP

TFTP

G m

- www.ruijie.com.cn
- www.ruijie.com.cn/service.aspx
- support.ruijie.com.cn

- webchat.ruijie.com.cn
- 4008-111-000